


ZEPRO

Z-LYFTEN PRODUKTION AB

55455

MONTERINGSANVISNING INSTALLATION INSTRUCTION

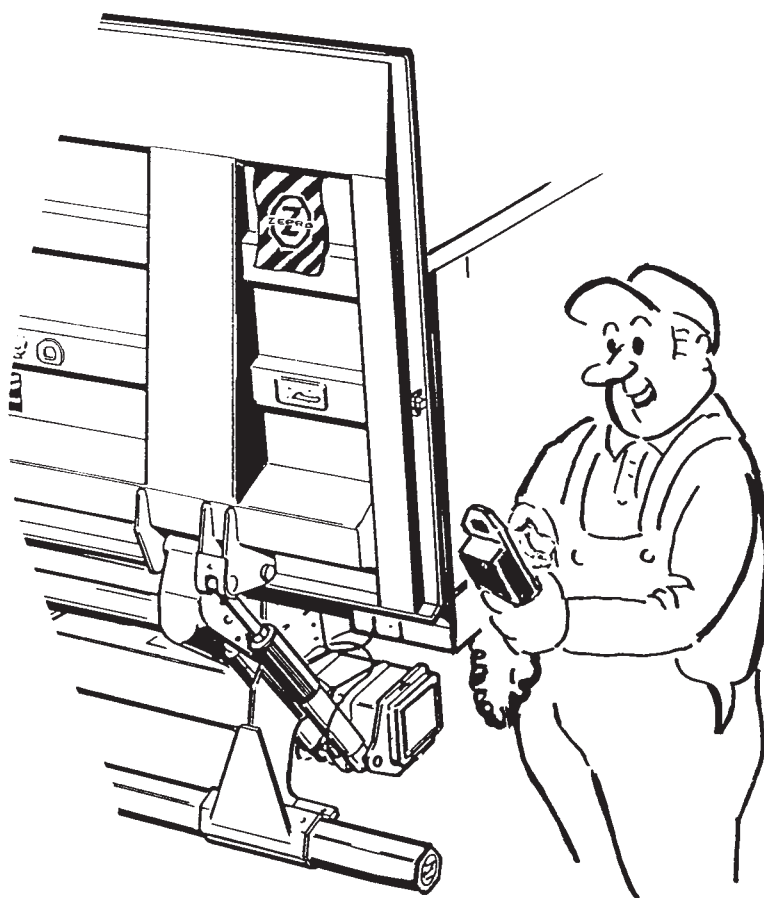

Hydraulslang kit / Hydraulic hose kit Z/ZL/ZS-150/200/250-MA-DA

2012-04-12

Försäljning/Sales/Verkauf

Mossvägen 8, 641 49 KATRINEHOLM, SWEDEN

Telephone: +46 150 - 489550

Telefax: +46 150 - 489551

E-mail: zepro@zepro.com

Internet: www.zepro.com

Fabrik/Factory/Fabrik

Allévägen 4, 840 73 BISPGÅRDEN, SWEDEN

Telephone: +46 696 - 17200

Telefax: +46 696 - 17242

E-mail: info@zepro.com

Internet: www.zepro.com

Varning!

Under följande operationer får ingen vistas bakom plattformen eller försöka att manövrera denna med något av manöverdonen.

Förberedelse

Om lyften är utrustad med slanghållare under stommen rekommenderas du att ta bort dessa på lämpligt sätt.

Öppna och vippa ner plattformen så långt det är möjligt. Sänk denna helt mot mark, detta för att minimera trycket i hydraulsystemet.

Ha ett tråg eller fat för spillolja till hands.

Montera slang

Följ noga instruktionerna på sid 5 - 7.

Obs! Det är olika montering på alu. skena för slangarna märkta 4 och 5 beroende på om det är en -MA eller en -DA modell.


Momentdrag kopplingarna med 35 - 40 Nm.

Fäst hydraulslang 1-8 i de anvisade kopplingspunkterna.

Kontroll

Försäkra dig om att oljenivån är tillräcklig.

Vid manövrering av lyften, försäkra dig om att hydraulslangar inte kommer i kontakt med muttrar, bultar eller andra mekaniska delar som kan skada slangen.

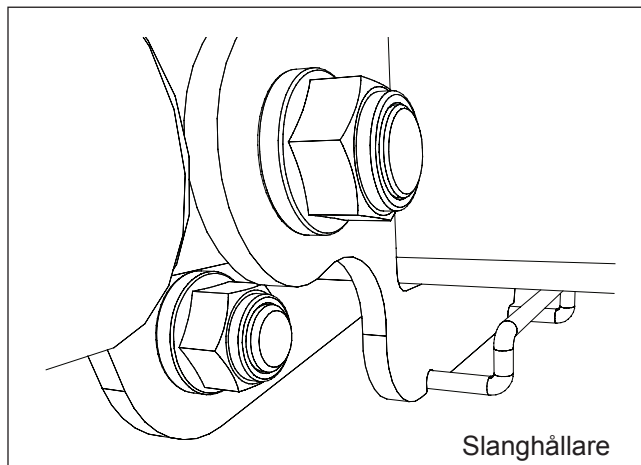

Slanghållare

Installation instruction

Attention!

No one may stand behind or try to operate the taillift during the following installation.

Preparation

If the taillift is equipt with mechanical hose-supports underneath t he support frame, it's recommended to remove these supports using accessible means.

Open and tilt down the taillift platform to it's end positions. Lower the platform until it comes to an complete halt against the ground, creating minimum pressure in the hydraulic system.

Have a tray or can for waste oil at hand.

Installing hoses

Follow carefully the instructions on page 5 - 7.

Note the different mounting on the alu. rail for hoses marked 4 and 5 depending on if it is a -MA or a -DA model.


Use torque 35-40 Nm connecting the couplings.

Attach hydraulic hose 1 through 8 to the assigned connection points.

Check the installation


Ensure that the oil level is sufficient.

During taillift operation, ensure that no hose comes in contact with pivot bults, nuts or mechanical parts on the support frame that might cause wear and tear.

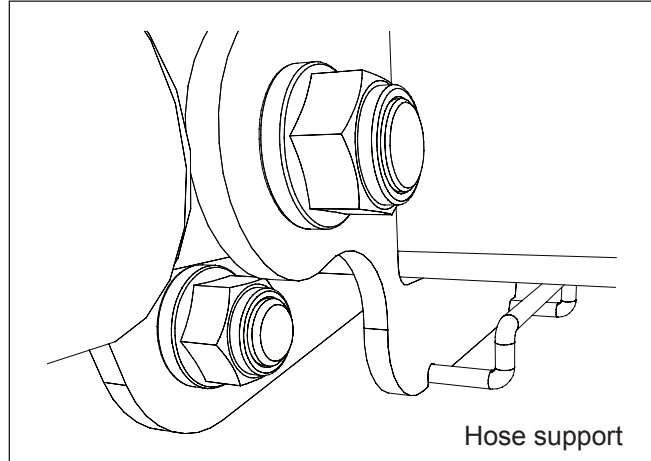


Monteringsanvisning / Installation instruction

Aluminium skena MA-modeller / Aluminium rail MA-models

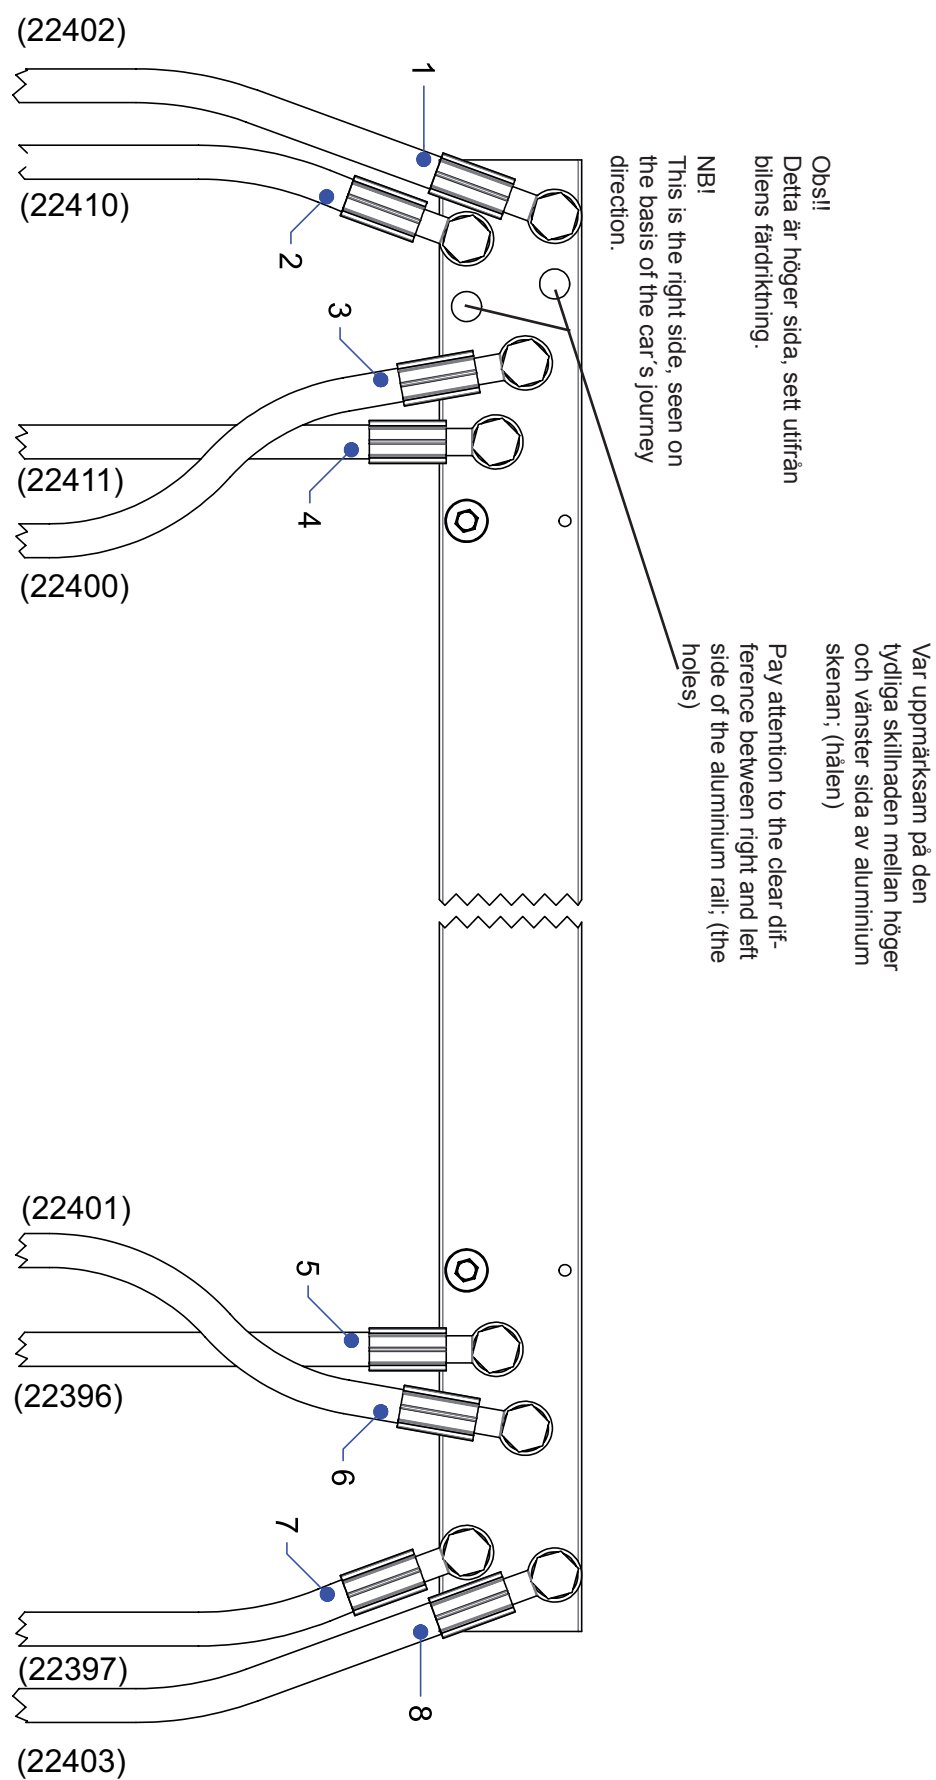

Monteringsanvisning / Installation instruction

Aluminium skena DA-modeller / Aluminium rail DA-models

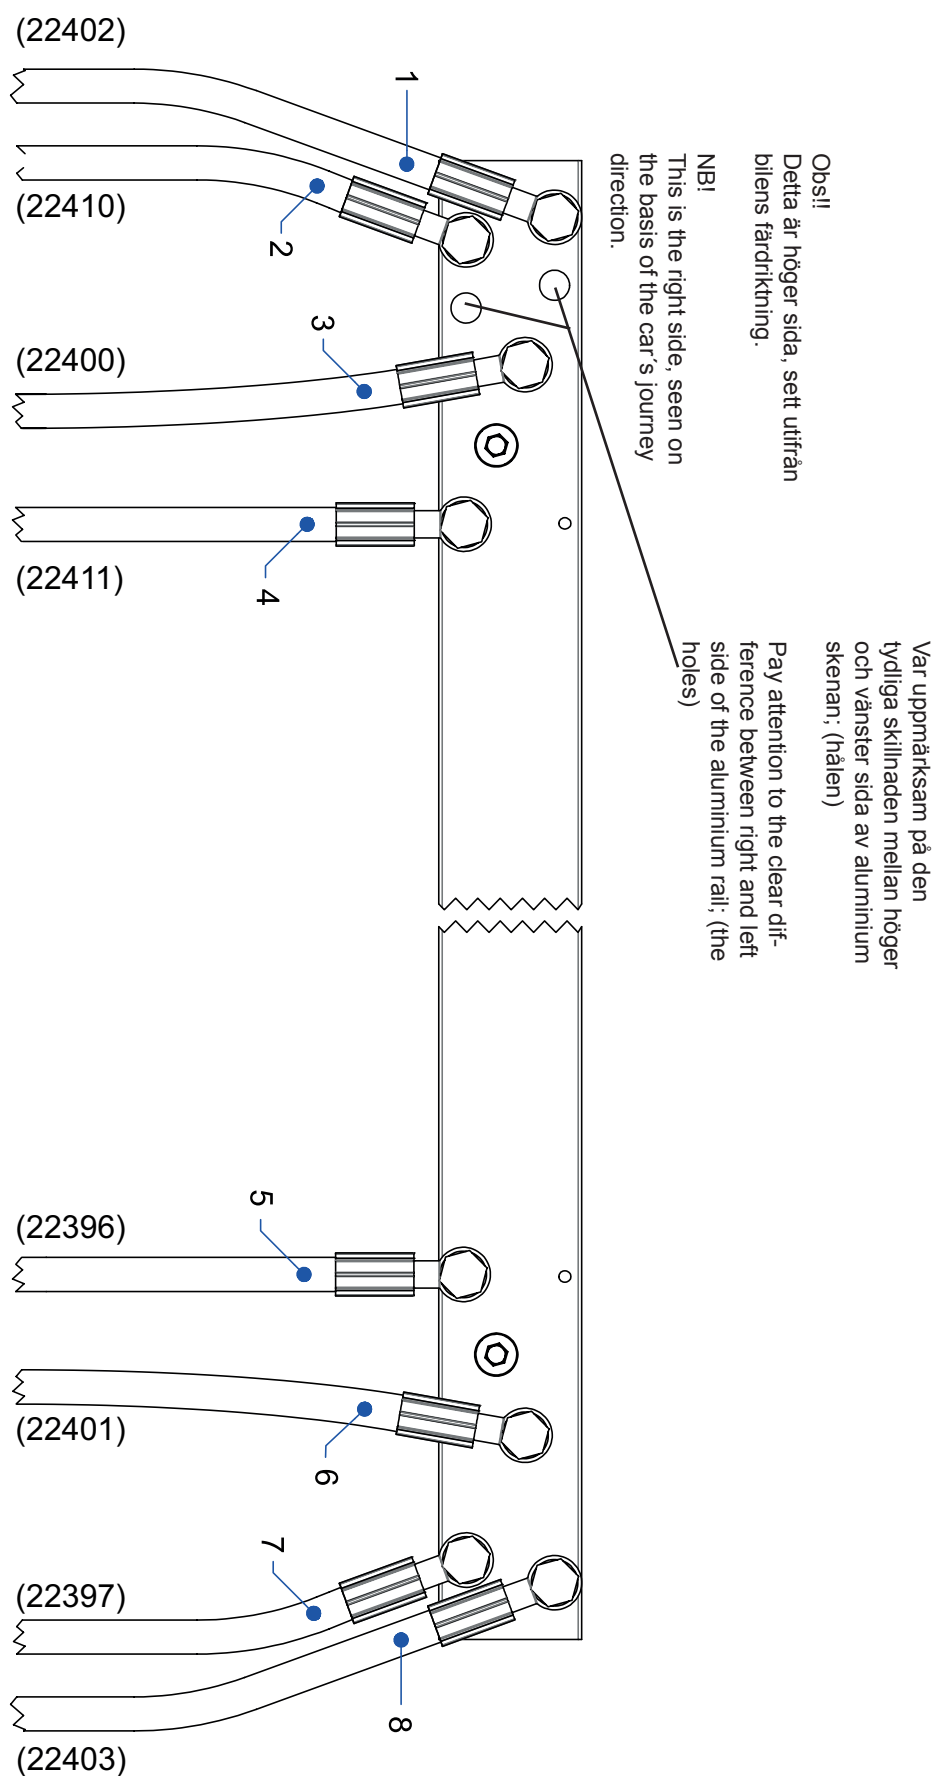

Monteringsanvisning / Installation instruction

